

# Gx24 - Gx80 Quick Start

For complete product documentation, and detailed set up instructions, refer to the *Gx24 - Gx80 User Manual* located on the provided CD.

## Set Up


Before applying power:

1. Unless the library is rack mounted, install the provided stabilizers following instructions in the User Manual on the provided CD.
2. Release the lift lock screw located at the back of the library near the bottom.

### CAUTION



Before applying power to the library the lift lock screw must be turned counterclockwise all the way out (the screw remains in place). Failure to do so may seriously damage the library.

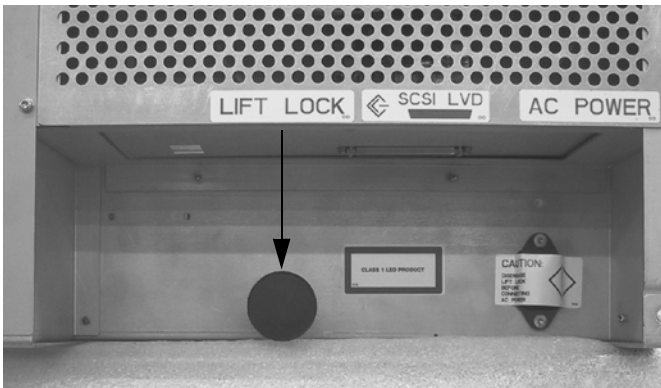

3. Connect the power cable. Do not use an extension cord.
4. Connect the SCSI cable.
5. Power on the library. Then power on or reboot the host computer.
6. Load media into the library using the library management software.

To maintain the warranty, do not remove the outside metal skin of the library to attempt manual media loading.

# Gx24 - Gx80 Quick Start

For complete product documentation, and detailed set up instructions, refer to the *Gx24 - Gx80 User Manual* located on the provided CD.

## Set Up


Before applying power:

1. Unless the library is rack mounted, install the provided stabilizers following instructions in the User Manual on the provided CD.
2. Release the lift lock screw located at the back of the library near the bottom.

### CAUTION



Before applying power to the library the lift lock screw must be turned counterclockwise all the way out (the screw remains in place). Failure to do so may seriously damage the library.

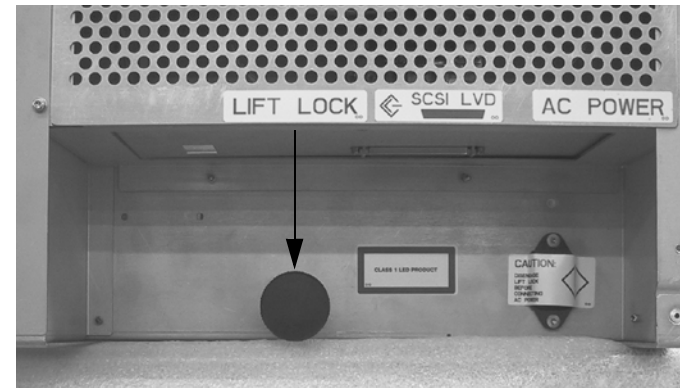

3. Connect the power cable. Do not use an extension cord.
4. Connect the SCSI cable.
5. Power on the library. Then power on or reboot the host computer.
6. Load media into the library using the library management software.

To maintain the warranty, do not remove the outside metal skin of the library to attempt manual media loading.

# Contacting Plasmon

First, register on-line at <http://plasmontech.com/warranty/index.html>.

	In the US	In Europe
Technical Support	+1-877-585-6793	+44 (0) 1763 262 963
fax	+1-719-593-4192	+44 (0) 1763 264 444
e-mail	tech.support@plasmon.com	support@plasmon.co.uk
World Wide Web	www.plasmon.com	www.plasmon.co.uk
Asia/Pacific, South America, and Canada		
International Calls	+1-719-593-4437	
fax	+1-719-593-4192	

When contacting Plasmon Support, be prepared to give the library model number and serial number.

# Contacting Plasmon

First, register on-line at <http://plasmontech.com/warranty/index.html>.

	In the US	In Europe
Technical Support	+1-877-585-6793	+44 (0) 1763 262 963
fax	+1-719-593-4192	+44 (0) 1763 264 444
e-mail	tech.support@plasmon.com	support@plasmon.co.uk
World Wide Web	www.plasmon.com	www.plasmon.co.uk
Asia/Pacific, South America, and Canada		
International Calls	+1-719-593-4437	
fax	+1-719-593-4192	

When contacting Plasmon Support, be prepared to give the library model number and serial number.

